



High speed data transfer to Windows PC/Mac based Nonlinear Editor
Install the P2 drive into a 5 type bay on a desktop PC
With the AC adaptor, you can use it as a stand-alone external drive
USB2.0/IEEE 1394b Interface
P2 Card Drive with Five P2 card Slots.
Please click here for a list of operation manuals to download.

AJ-PCD20

P2 Card Drive with Five P2 card Slots and USB 2.0/IEEE 1394b Interfaces

AJ-PCD20

<https://eu.connect.panasonic.com/es/en/products/broadcast-proav/aj-pcd20>