



**High speed data transfer to Windows PC/Mac based Nonlinear Editor**  
**Install the P2 drive into a 5 type bay on a desktop PC**  
**With the AC adaptor, you can use it as a stand-alone external drive**  
**USB2.0/IEEE 1394b Interface**  
**P2 Card Drive with Five P2 card Slots.**  
**Please click here for a list of operation manuals to download.**

## **AJ-PCD20**

P2 Card Drive with Five P2 card Slots and USB 2.0/IEEE 1394b Interfaces

AJ-PCD20

<https://eu.connect.panasonic.com/fr/en/products/broadcast-proav/aj-pcd20>