



панель управления PTZ-камерами

## AW-RP150 - панель управления PTZ-камерами

Пульт дистанционного управления камерами, который выпускается как дополнение к линейке многофункциональных профессиональных PTZ-камер Panasonic.

### Key Features

Большой сенсорный экран, обеспечивающий удобство работы

Поддержка управления до 200 PTZ-камер по IP

Предустановки, упрощающие управление PTZ-камерой и обеспечивающие быстрый переход на значения, сохраненные в памяти

Интуитивно понятный дизайн элементов, созданный на основе обратной связи с операторами, ежедневно работающими с роботизированными камерами

Вход-выход 3G-SDI, 5 x RS-422, LAN с питанием по PoE+, 2 x GPIO



AW-RP150 -  
панель  
управления PTZ-  
камерами

<https://eu.connect.panasonic.com/global/ru/products/broadcast-proav/aw-rp150-panel-upravleniya-ptz-kamerami>

**General**

<b>Power Requirements</b>	12 V DC (10.8 V to 13.2 V)
<b>PoE+</b>	IEEE802.3at standard: DC 42 V to 57 V (Camera Input)
<b>Current Consumption</b>	1.0 A (Connector Input) 0.6 A (PoE+ power supply)
<b>Ambient Operating Temperature</b>	0 °C to 40 °C (32 °F to 104 °F)
<b>Ambient Operating Humidity</b>	20% to 90% (no condensation)
<b>Storage Temperature</b>	-20 °C to 50 °C (-4 °F to 122 °F)
<b>Bec</b>	Approx. 3.2 kg (7.05 lb)
<b>Dimensions (W x H x D) (mm)</b>	342 mm x 178 mm x 245 mm(excluding protrusions)
<b>Dimensions (W x H x D) (inch)</b>	13-15/32 inches x 7 inches x 9-21/32 inches(excluding protrusions)
<b>Controller Supported Equipment</b>	IP/RS422 AW-UE150W/K, AW-HR140*1, AW-HE130W/K*1, AW-HN130W/K*1, AW-UE70W/K*1, AW-UN70W/K*1, AW-HE40 Series*1, AW-HN40HW/HK*1, AW-HE38HW/HK*1, AW-HN38HW/HK*1

**Input/Output Connector**

<b>Input</b>	DC 12 V IN XLR 4-pin  3G-SDI IN SMPTE292 / 75 Ω (BNC x 1) Supported formats: 1080/59.94p*2, 1080/50p*2, 1080/59.94i, 1080/50i, 1080/23.98p, 1080/25p, 1080/23.98PsF, 1080/25PsF
<b>Output</b>	ACTIVE THRU OUT SMPTE292 / 75 Ω (BNC x 1)

<b>Input/Output</b>	IP CONT:
	=====
	100BASE-TX
	-----
	PoE+ input
	-----
	Connection cable: LAN cable, max. 100 m (328 ft)
	· When connecting the unit via a switching hub:
	Straight cable or a cross cable (category 5 cable), STP (Shielded Twisted Pair) cable recommended
	· When connecting the unit directly: Crossover cable (category 5 cable), STP (Shielded Twisted Pair) cable recommended
=====	
SERIAL CONT (RJ-45):	
=====	
RS-422 (control signals for remote cameras), TALLY OUT	
-----	
Connecting cable:	
Straight cable (category 5e or better shielded cable), max. 1000 m (3280 ft)	
-----	
TALLY OUT: Open collector output (negative logic)	
Maximum voltage resistance DC 24 V, Maximum current 50 mA	
=====	
TALLY/GPIO 1	
=====	
D-sub 25-pin, female, inch thread	
-----	
TALLY IN : 10 inputs (for receiving photocoupler signals)	
-----	
GPI : 6 inputs (for receiving photocoupler signals)	
GPIO : 5 inputs (for receiving photocoupler signals)	
or 5 outputs (open collector outputs, negative logic)	
· Input/output switched with menu settings	
=====	
GPIO 2	
=====	
D-sub 25-pin, female, inch thread	
-----	
GPI : 10 inputs (for receiving photocoupler signals)	
GPIO : 10 inputs (for receiving photocoupler signals) or 10 outputs (open collector outputs, negative logic)	
· Input/output switched with menu settings	
Reserve connectors:	
2 connectors (For future expansion feature)	
<b>LCD Display</b>	7-inch Touch Panel GUI Monitor (WVGA (800×480) )
<b>SD Memory Card Slot</b>	SDHC / SDXC Memory Card Slot x 1
<b>Connection Specifications</b>	
<b>No. of Connectable Cameras</b>	200 (IP), 5 (RS422)
<b>No. of Camera Selection Buttons</b>	10
<b>No. of Camera Groups</b>	20 (10 units per 1 group)
<b>Memory</b>	
<b>Preset Memory</b>	No. of memory : presets 100
<b>Tracing Memory</b>	No. of cameras : Cam1 to Cam10
	Recording time, no. of memory settings : Maximum 5 min. total per camera, maximum of 10 settings per camera
<b>Other Functions</b>	
<b>No. of User Assignable Buttons</b>	6 + up to 10 on the LCD menu
<b>Pan / Tilt Speed Adjustment</b>	7 levels
<b>Tally LED display color</b>	green / red

---

**Note**

\*1: Connection with the AW-RP150Gj is planned for future support. Contact your sales representative for further information on when support will be available for this feature. Use may require a software version update. \*2: Level-A support only.