# ET-PKD130B

### Description

This bracket assembly is used when mounting a Panasonic projector to ceilings.

NOTE: This ceiling mount bracket cannot be used by itself. Combine it with the optional ceiling mount bracket.

#### **Specifications**

Dimensions (W × H × D):  $378 \times 56 \times 400 \text{ mm} (14-7/8 \times 2-7/32 \times 15-3/4 \text{ inches})$ 

Weight: Approx. 3.0 kg\* (6.61 lbs\*)

Applicable ceiling mount bracket ET-PKD130H/PKD120H/PKD120S/PKD310H/PKD310S/PKD56H/PKD55S

TY-PKD55S

Applicable projector: PT-DZ870K/DZ870W/DZ870LK/DZ870LW/

DW830K/DW830W/DW830LK/DW830LW/DX100K/DX100W/DX100LK/DX100LW

DZ770S/DZ770K/DZ770LS/DZ770LK/

DW740S/DW740K/DW740LS/DW740LK/DX810S/DX810K/DX810LS/DX810LK/

DZ680S/DZ680K/DZ680LS/DZ680LK/

DW640S/DW640K/DW640LS/DW640LK/DX610S/DX610K/DX610LS/DX610LK/

DZ6710/DZ6710L/

DW730S/DW730K/DW730LS/DW730LK/DX800S/DX800K/DX800LS/DX800LK/

DZ6700/DZ6700L/DW6300S/DW6300K/DW6300LS/DW6300LK/

D6000S/D6000K/D6000LS/D6000LK/D5000S/D5000LS


\* Average value. May differ depending on models.

**Parts** 

## Caution:

- · Mounting should be done by a qualified technician.
- Make sure that the mounting (ceiling) area has sufficient strength.
- · Read the enclosed mounting instructions thoroughly before starting.
- Do not use an electric screwdriver or impact driver to tighten screws. Use a torque driver or hexagon torque wrench and tighten screws to the torque specified in the instructions.
- When the product is no longer going to be used, have it disposed of quickly by a professional disposal service.

## **Dimensions**

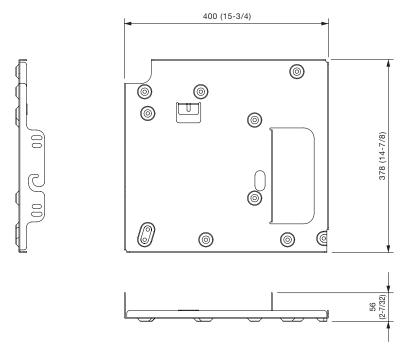

unit : mm (inch)
NOTE: This illustration is not drawn
to scale.

Weights and dimensions shown are approximate. Specifications subject to change without notice.