

Panasonic[®]


Operating Instructions

Replacement Filter Unit

Commercial Use

ENGLISH

Model No. ET-RFL100

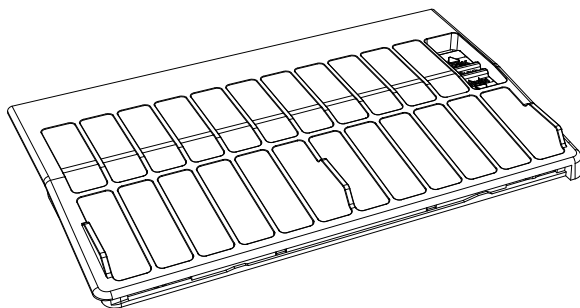

Thank you for purchasing this Panasonic product.

- Please read these operating instructions and the projector operating instructions carefully, and then use this product correctly.
- Please save this Operating Instructions for future use.

Read this first!

Notes on replacing the air filter unit

- Turn off the power before you replace the air filter unit.
- When attaching the air filter unit, make sure that the projector is stable, and work in an environment that is safe, even in the event of the air filter unit dropping.
- Do not operate the projector with the filter removed. Dust may accumulate on the optical elements degrading picture quality.
- Do not put anything into the air vents. Doing so may result in malfunction of the projector.
- Do not wash the filter with water or any other liquid matter. Otherwise the filters may be damaged.

Replacing the air filter unit

■ Air filter unit

Filter prevents dust from accumulating on the optical elements inside the projector. Should the filter become clogged with dust particles, it will reduce cooling fans' effectiveness and may result in internal heat buildup and adversely affect the life of the projector. If a "Filter warning" icon appears on the screen, replace the filter immediately.

■ Replacement of the air filter unit

1) Remove the air filter unit.


- Turn over the projector. Place the latch in the OPEN position and pull out the filter (bottom) in the arrow direction.

2) Replace the air filter unit.

- Put new filter back into the position. Make sure that the filter is fully inserted to the projector, and place back the latch in the LOCK position.

3) Resetting the Filter Counter

- Be sure to reset the [Filter counter] after replacing the filter.

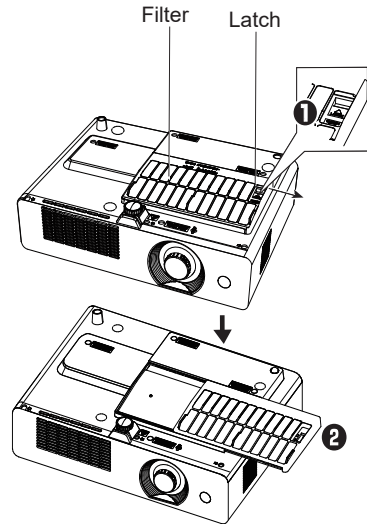

Panasonic Connect Co., Ltd.

Web Site : <https://panasonic.net/cns/projector/>

© Panasonic Connect Co., Ltd. 2022