Panasonic


Operating Instructions Basic Guide

UHD LCD Display For business use

English

Model No. TH-86EQ3W 86-inch model TH-75EQ3W 75-inch model TH-50EQ3W 50-inch model TH-65EQ3W 65-inch model

TH-55EQ3W 55-inch model TH-43EQ3W 43-inch model

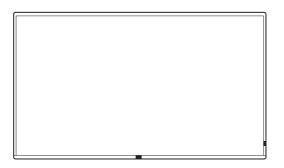



Contents

mportant Safety Instructions · · · · · 2
FCC STATEMENT ······ 3
mportant Safety Notice 4
Safety Precautions······6
Precautions for use ······9
Accessories11
Cautions when moving ······ 13
Kensington security······ 13
Eyebolt ······ 14
Connections · · · · · 15
dentifying Controls · · · · 19
Basic Controls······21
Specifications ····· 23
Software License ····· 26
PANASONIC PROFESSIONAL DISPLAY
imited Warranty Coverage 28

Read before use

For more information about this product, please read the "Operating Instructions - Functional Manual".

To download the "Operating Instructions - Functional Manual", please visit the Panasonic website (https://panasonic.net/cns/prodisplays/).

- · This manual is common to all the models regardless of suffixes of the model number.
- · Please read these instructions before operating your set and retain them for future reference.
- Illustrations and screens in this Operating Instructions are images for illustration purposes, and may be different from the actual ones.
- · Descriptive illustrations in this Operating Instructions are created mainly based on the 55-inch model.











WARNING: To reduce the risk of electric shock, do not remove cover or back.

No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrow-head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

WARNING:

To prevent damage which may result in fire or shock hazard, do not expose this apparatus to rain or moisture.

Do not place containers with water (flower vase, cups, cosmetics, etc.) above the set.

(including on shelves above, etc.)

WARNING:

- To prevent electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.
- 2) Do not remove the grounding pin on the power plug. This apparatus is equipped with a three pin grounding-type power plug. This plug will only fit a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician.

Do not defeat the purpose of the grounding plug.

WARNING:

THIS PRODUCT CONTAINS A COIN BATTERY



- INGESTION HAZARD: This product contains a button cell or coin battery.
- DEATH or serious injury can occur in 2 hours or less if swallowed or placed inside any part of the body.



- The battery is hazardous, KEEP new and used batteries OUT OF REACH of CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments / accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) To prevent electric shock, ensure the grounding pin on the AC cord power plug is securely connected.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC CAUTION:

To assure continued compliance, follow the attached installation instructions and use only the provided power supply cord. Any changes or modifications not expressly approved by Panasonic Corp. of North America could void the user's authority to operate this device.

Supplier's Declaration of Conformity Model No.

TH-86EQ3W, TH-75EQ3W, TH-65EQ3W, TH-55EQ3W, TH-50EQ3W, TH-43EQ3W

Responsible Party:

Panasonic Corporation of North America Two Riverfront Plaza, Newark, New Jersey 07102-5490

Contact Source:

Panasonic Projector & Display Americas LLC 1-877-655-2357

General Contact:

http://shop.panasonic.com/support

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To maintain compliance with EMC regulations, use shielded cables to connect to the following terminals: HDMI input terminal, D-sub input terminal and RS-232C input terminal.

CANADIAN NOTICE:

This Class A digital apparatus complies with Canadian ICES-003.

WARNING:

- Not for use in a computer room as defined in the Standard for the Protection of Electronic Computer/ Data Processing Equipment, ANSI/NFPA 75.
- For permanently connected equipment, a readily accessible disconnect device shall be incorporated in the building installation wiring.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

For USA-California Only

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material - special handling may apply. See

www.dtsc.ca.gov/hazardouswaste/perchlorate

For European Union Only



This CE mark covers the battery(ies) supplied with the product and indicates that the battery(ies) comply with the requirements of the Battery Regulation (EU) 2023/1542.

Note:

Image retention may occur. If you display a still picture for an extended period, the image might remain on the screen. However, it will disappear when a general moving picture is displayed for a while.

Trademark Credits

- Microsoft, Windows, Internet Explorer and Microsoft Edge are the registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Mac, macOS and Safari are the trademarks of Apple Inc. registered in the United States and other countries.
- PJLink is a registered or pending trademark in Japan, the United States, and other countries and regions.
- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

Important Safety Notice

WARNING

 To prevent damage which may result in fire or shock hazard, do not expose this appliance to dripping or splashing.

Do not place containers with water (flower vase, cups, cosmetics, etc.) above the set. (including on shelves above, etc.)

No naked flame sources, such as lighted candles, should be placed on / above the set.

- To prevent electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.
- 3) Do not remove the earthing pin on the power plug. This apparatus is equipped with a three pin earthing-type power plug. This plug will only fit an earthing-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician.

Do not defeat the purpose of the earthing plug.

 To prevent electric shock, ensure the earthing pin on the AC cord power plug is securely connected.

CAUTION

This appliance is intended for use in environments which are relatively free of electromagnetic fields.

Using this appliance near sources of strong electromagnetic fields or where electrical noise may overlap with the input signals could cause the picture and sound to wobble or cause interference such as noise to appear.

Using this appliance near sources of strong electromagnetic fields or where electrical noise may overlap with the input signals could cause the sensor function not to work correctly.

To avoid the possibility of harm to this appliance, keep it away from sources of strong electromagnetic fields.

WARNING:

This equipment is compliant with Class A of EN55032/CISPR32. In a residential environment this equipment may cause radio interference.

IMPORTANT INFORMATION: Stability Hazard

Never place a display in an unstable location. A display may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the display.
- Only using furniture that can safely support the display
- Ensuring the display is not overhanging the edge of the supporting furniture.
- Not placing the display on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the display to a suitable support.
- Not placing the display on cloth or other materials that may be located between the display and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the display or its controls.

If the existing display is going to be retained and relocated, the same considerations as above should be applied.

IMPORTANT: THE MOULDED PLUG FOR YOUR SAFETY, PLEASE READ THE FOLLOWING TEXT CAREFULLY.

This display is supplied with a moulded three pin mains plug for your safety and convenience. A 10 amp fuse is fitted in this plug. Shall the fuse need to be replaced, please ensure that the replacement fuse has a rating of 10 amps and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark $\stackrel{\P}{\bigoplus}$ or the BSI mark $\stackrel{\P}{\bigvee}$ on the body of the fuse.

If the plug contains a removable fuse cover, you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local Panasonic dealer.

Do not cut off the mains plug.

Do not use any other type of mains lead except the one supplied with this display.

The supplied mains lead and moulded plug are designed to be used with this display to avoid interference and for your safety.


If the socket outlet in your home is not suitable, get it changed by a qualified electrician.

If the plug or mains lead becomes damaged, purchase a replacement from an authorized dealer.

WARNING: - THIS DISPLAY MUST BE EARTHED

How to replace the fuse.

Open the fuse compartment with a screwdriver and replace the fuse.

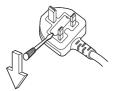

Safety Precautions

WARNING

■ Setup

This LCD Display is for use only with the following optional accessories.

Use with any other type of optional accessories may cause instability which could result in the possibility of injury.

Securely install the pedestal and wall hanging bracket of the optional accessories. Ask an authorized dealer for installation.

The following number of people are required for installation.

86-inch model 75-inch model : 4 or more
65-inch model 55-inch model 50-inch model
43-inch model : 2 or more

Pedestal

75-inch model 65-inch model : TY-ST75PE9

55-inch model : TY-ST55PE9

50-inch model 43-inch model : TY-ST43PE9

· Wall hanging bracket*1

86-inch model 75-inch model 65-inch model 77-WK98PV1

 Early Warning Software (Basic license/3-year license):

ET-SWA100 series*2

- *1: This product can be purchased in the U.S. and Japan.
- *2: Suffix of the part number may differ depending on the license type.

Note

- The part number of the optional accessories are subject to change without notice.
- 86-inch model 75-inch model 65-inch model:
 When attaching the wall hanging bracket, be sure to remove the 2 lower handles.

When installing the pedestal or wall hanging bracket, read the operating instructions supplied with it carefully and install properly. Also, be sure to take a fall-prevention measure.

We are not responsible for any product damage, etc. caused by failures in the installation environment for the pedestal or wall hanging bracket even during the warranty period.

Small parts can present choking hazard if accidentally swallowed. Keep small parts away from young children. Discard unneeded small parts and other objects, including packaging materials and plastic bags/sheets to prevent them from being played with by young children, creating the potential risk of suffocation.

Do not place the Display on sloped or unstable surfaces, and ensure that the Display does not hang over the edge of the base.


· The Display may fall off or tip over.

Install this unit at a location with minimal vibration and which can support the weight of the unit.

 Dropping or falling of the unit may cause injury or malfunction.

Caution - For use only with UL Listed Wall Mount Bracket with minimum weight/load, please refer to the Specifications. (see page 24)

When installing the display vertically, be sure that the power indicator comes to the upper side.

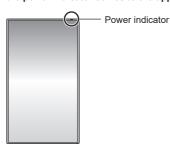

 If installed in different directions, heat is generated and it may cause fire or damage to the Display.

When using this unit, be sure to take safety measures to prevent falling or dropping of the unit.

 If an earthquake occurs or a child climbs the unit, the unit may fall or drop, resulting in an injury.

Do not position the unit with its liquid crystal panel facing upright.

 There are conditions of mounting method, environmental temperature, connections and settings.
 If installed in different conditions, heat is generated and it may cause fire or damage to the Display.

Cautions for Wall or Pedestal Installation

- The installation should be performed by an installation professional. Installing the Display incorrectly may lead to an accident that results in death or serious injury. Use the optional Pedestal. (see page 6)
- When installing on a wall, the specified wall hanging bracket (optional accessory) or a wall hanging bracket that conforms to VESA standards must be used.

86-inch model : VESA 600 × 400

75-inch model : VESA 600 × 400

65-inch model : VESA 400 × 400

55-inch model : VESA 400 × 400

50-inch model : VESA 400 × 400

43-inch model : VESA 200 × 200

(see page 9)

- Before installation, be sure to check if the mounting location has enough strength to support the weight of the Display and the wall hanging bracket for anti drop.
- If you terminate the use of the product, ask a professional to remove it promptly.

 When mounting the Display on the wall, prevent the mounting screws and power cable from contacting metal objects inside the wall. An electric shock may occur if they contact metal objects inside the wall.

■ When using the LCD Display

The Display is designed to operate on 110 - 240 V $^{\sim}$, 50/60 Hz.

If problems or malfunction occur, stop using immediately.

If problems occur, unplug the power supply plug.

- · Smoke or an abnormal odour come out from the unit.
- No picture appears or no sound is heard, occasionally.
- Liquid such as water or foreign objects got inside the unit.
- · The unit has deformed or broken parts.

If you continue to use the unit in this condition, it could result in fire or electric shock.

- Unplug the power supply plug from the wall outlet, and then contact the dealer for repairs.
- To cut off the power supply to this Display completely, you need to unplug the power supply plug from the wall outlet.
- Repairing the unit yourself is dangerous, and shall never be done.
- To enable to unplug the power supply plug immediately, use the wall outlet which you can reach easily.

Do not touch the unit directly by hand when it is damaged.

· Electric shock could occur.

Do not stick any foreign objects into the Display.

 Do not insert any metal or flammable objects into the ventilations holes or drop them onto the Display, as doing so can cause fire or electric shock.

Do not remove the cover (cabinet) or modify it.

 High voltages which can cause fire or electric shocks are present inside the Display. For any inspection, adjustment and repair work, please contact your local Panasonic dealer.

Ensure that the mains plug is easily accessible.

The mains plug shall be connected to a mains socket outlet with a protective earthing connection.

Do not use any power supply cord other than that provided with this unit.

 Doing so may cause short-circuit, generates heat, etc., which could cause electric shock or fire.

Do not use the supplied power supply cord with any other devices.

 Doing so may cause short-circuit, generates heat, etc., which could cause electric shock or fire.

Clean the power supply plug regularly to prevent it becoming dusty.

 If there is a build up of dust on the plug, the resultant humidity may cause short-circuit, which could cause electric shock or fire. Unplug the power supply plug from the wall outlet and wipe it with a dry cloth.

Do not handle the power supply plug with wet

· Doing so may cause electric shocks.

Securely insert the power supply plug (socket outlet side) and the power supply connector (main unit side) as far as it will go.

- If the plug is not fully inserted, heat may be generated which could cause fire. If the plug is damaged or the wall socket is loose, they shall not be used.
- 86-inch model : Make sure that the connector is locked on both the left and right sides.

Do not do anything that may damage the power supply cord or the power supply plug.

 Do not damage the cable, make any modifications to it, place heavy objects on top of it, heat it, place it near any hot objects, twist it, bend it excessively or pull it. To do so may cause fire and electric shock. If the power cable is damaged, have it repaired at your local Panasonic dealer.

Do not touch the power supply cord or the plug directly by hand when they are damaged.

 Doing so may cause electric shock or fire due to short-circuit.

Keep the supplied AAA/R03/LR03 batteries out of reach of children. If accidentally swallowed, it will be harmful to the body.

 Please contact a doctor immediately in case you doubt that the child may have swallowed it.

To prevent the spread of fire, keep candles or other open flames away from this product at all times.



CAUTION

Do not place any objects on top of the Display. Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloths and curtains.

 Doing so may cause the Display to overheat, which can cause fire or damage to the Display.

For sufficient ventilation, see page 9

Do not place the Display where it may be affected by salt or corrosive gas.

 Doing so may cause the Display to fall due to corrosion, and it may result in injury. Also, the unit may malfunction.

The following number of people are required to carry or unpack this unit.

86-inch model 75-inch model : 4 or more
65-inch model 55-inch model 50-inch model
43-inch model : 2 or more

 If this is not observed, the unit may drop, resulting in injury.

When disconnecting the power supply cord, always pull on the plug (socket outlet side) / the connector (main unit side).

 Pulling the cord may damage the cord, and it may cause electric shock or fire due to short-circuit.

Be sure to disconnect all cables before moving the Display.

 If the Display is moved while some of the cables are still connected, the cables may become damaged, and fire or electric shock could result.

Disconnect the power supply plug from the wall socket as a safety precaution before carrying out any cleaning.

· Electric shocks can result if this is not done.

Do not step on, or hang from the Display or the Pedestal.

 They might tip over, or might be broken and it may result in injury. Pay special attention to the children.

Do not reverse the polarity (+ and -) of the battery when inserting.

- Mishandling the battery may cause its explosion or leakage, resulting in fire, injury or damage to surrounding properties.
- Insert the battery correctly as instructed. (see page 12)

Do not use batteries with the outer cover peeling away or removed.

 Mishandling the batteries may cause the batteries to short circuit, resulting in fire, injury or damage to surrounding properties.

If the battery fluid leaks, do not touch it with bare hands, and take the following measures if necessary.

- Battery fluid on your skin or clothing could result in skin inflammation or injury.
 Rinse with clean water and seek medical advice immediately.
- Battery fluid coming in contact with your eyes could result in loss of sight.
 In this case, do not rub your eyes. Rinse with clean water and seek medical advice immediately.

Remove the batteries from the remote control transmitter when not using for a long period of time.

 The battery may leak, heat, ignite or burst, resulting in fire or damage to surrounding properties.

Remove exhausted batteries from the remote control immediately.

 Leaving the batteries unattended in it may cause battery leakage, heat or burst.

Do not burn or breakup batteries.

 Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

Do not turn the Display upside down.

Do not position the unit with its liquid crystal panel facing upright.

Precautions for use

Cautions when installing

Do not set up the Display outdoors.

· The Display is designed for indoor use.

Install this unit at a location which can support the weight of the unit.

· Dropping or falling of the unit may cause injury.

Do not install the unit near a high-voltage line or a power source.

 Installing the unit near a high-voltage line or a power source may receive interference.

Install the unit away from heat appliances.

 Failure to do so may cause deformation of the cabinet or malfunction.

Environmental temperature to use this unit

- When using the unit where it is below 1 400 m (4 593 ft) above sea level: 0 °C to 40 °C (32 °F to 104 °F)
- When using the unit at high altitudes (1 400 m (4 593 ft) and higher and below 2 800 m (9 186 ft) above sea level): 0 °C to 35 °C (32 °F to 95 °F)

Do not install the unit where it is 2 800 m (9 186 ft) and higher above sea level.

 Failure to do so may shorten the life of the internal parts and result in malfunctions.

We are not responsible for any product damage, etc. caused by failures in the installation environment even during the warranty period.

Transport only in upright position!

 Transporting the unit with its liquid crystal panel facing upright or downward may cause damage to the internal circuitry.

Do not grab the liquid crystal panel.

 Do not forcibly press the liquid crystal panel, or push it with a pointed object. Applying a strong force to the liquid crystal panel will cause unevenness of the screen display, resulting in malfunction.

Do not install the product to a place where the product is exposed to direct sunlight.

 If the unit is exposed to direct sunlight even indoors, the temperature rise of the liquid crystal panel may cause malfunction.

In the case of storage, store the unit in a dry room.

Required space for ventilation

 Operation of this unit is guaranteed up to an ambient temperature of 40 °C (104 °F). When installing the unit in a case or chassis, be sure to provide adequate ventilation with a cooling fan or ventilation hole so that the surrounding temperature (inside the case or chassis) including the temperature of the front surface of the liquid crystal panel can be kept at 40 °C (104 °F) or less.

About the screws used when using a wall hanging bracket that conforms to VESA standards



Depth of screw hole

Screw for fixing the Display onto the wallhanging bracket (not supplied with the Display)

 Make sure that all screws are securely tightened.

(View from the side)

Inch model	Screw pitch for installation	Depth of screw hole	Screw (quantity)
86	600 mm × 400 mm	20 mm	M8 (4)
75	600 mm × 400 mm	20 mm	M8 (4)
65	400 mm × 400 mm	20 mm	M8 (4)
55	400 mm × 400 mm	18 mm	M6 (4)
50	400 mm × 400 mm	20 mm	M6 (4)
43	200 mm × 200 mm	16 mm	M6 (4)

Note for connection

Removing and inserting the power cord and connection cables

 When the unit has been installed on the wall, if the power cord and connection cables are difficult to remove and insert, make connections first before installation. Be careful not to allow the cables to be entangled. After installation is completed, insert the power plug to the outlet.

When using

Image retention may occur.

 If you display a still picture for an extended period, the image might remain on the screen. However, it will disappear when a general moving picture is displayed for a while.

When polarization sunglasses are worn, the screen display may be invisible.

 This phenomenon occurs due to deflection characteristics of the liquid crystal panel. This is not a malfunction.

Red, blue or green dots on the screen are a liquid crystal panel-specific phenomenon. This is not a malfunction.

 Although the liquid crystal display is manufactured with high-precision technology, always-lighting dots or non-lighting dots may appear on the screen. This is not a malfunction.

Inch model	Dot omission ratio*	
86	0.00009% or less	
75	0.00007% or less	
65	0.00005% or less	
55	0.00005% or less	
50	0.00005% or less	
43	0.00005% or less	

^{*:} Calculated in sub-pixel units according to the ISO9241-307 standard.

Depending on the temperature or humidity conditions, uneven brightness may be observed. This is not a malfunction.

 This unevenness will disappear while applying current continuously. If not, consult the distributor.

If the Display is not going to be used for any prolonged length of time, unplug the power supply plug from the wall outlet.

 When storing the product for long periods with no power supplied, do not store it in a location exposed to direct sunlight.

If the power is instantaneously interrupted or stopped, or if the power voltage is instantaneously lowered, the Display may not operate normally.

 In this case, turn off the power of the Display and the connected devices once, and then turn on the power again.

Picture noise may occur if you connect / disconnect the cables connected to the input terminals you are currently not watching, or if you turn the power of the video equipment on / off, but it is not a malfunction.

Notes on Using Wired LAN

When setting up the Display at a place, where electric statistic occurs often, take a sufficient antistatic measure before start using.

- When the Display is used at a location, where static electricity occurs often, such as on a carpet, a wired LAN communication is disconnected more often. In that case, remove static electricity and the noise source that may cause problems with an antistatic mat, and re-connect the wired LAN.
- In rare cases, the LAN connection is disabled due to static electricity or noise. In that case, turn off the power of the Display and the connected devices once and then re-turn on the power.

The Display may not work properly due to strong radio wave from the broadcast station or the radio.

 If there is any facility or equipment, which outputs strong radio wave, near the installation location, set up the Display at a location sufficiently far from the source of the radio wave. Or, wrap the LAN cable connected to the LAN terminal by using a piece of metal foil or a metal pipe, of which is grounded at both ends.

Request Regarding Security

When using this unit, take safety measures against the following incidents.

- · Personal information being leaked via this unit
- Unauthorized operation of this unit by a malicious third party
- Interfering or stopping of this unit by a malicious third party

Take sufficient security measures.

- Set a password for LAN control and restrict the user who performs the control.
- Make your password difficult to guess as much as possible.
- · Change your password periodically.
- Panasonic Projector & Display Corporation or its affiliate companies will never ask for your password directly. Do not divulge your password in case you receive such inquiries.
- The connecting network must be secured by a firewall, etc.
- When disposing the product, initialize the data before disposing.

Cleaning and maintenance

First, remove the mains plug from the mains socket. Gently wipe the surface of the liquid crystal panel or cabinet by using a soft cloth to remove dirt.

- To remove stubborn dirt or fingerprints on the surface of the liquid crystal panel, dampen a cloth with diluted neutral detergent (1 part detergent to 100 parts water), wring out the cloth firmly, and then wipe away the dirt. Finally, wipe away all the moisture with a dry cloth.
- If water droplets get inside the unit, operating problems may result.

Note

 The surface of the liquid crystal panel is specially treated. Do not use a hard cloth or rub the surface too hard, otherwise this may cause scratches on the surface.

Usage of a chemical cloth

- Do not use a chemical cloth for the liquid crystal panel surface.
- Follow the instructions for the chemical cloth to use it for the cabinet.

Avoid contact with volatile substances such as insect sprays, solvents and thinner.

 This may cause damage to the cabinet or cause peeling of the paint. Furthermore, do not leave it in contact with a rubber or PVC substance for a long time

Remove dust and dirt from the ventilation holes.

- Dust may adhere to the vicinity of the ventilation holes depending on the usage environment. As a result, if the internal cooling of this unit or circulation of exhaust heat deteriorates, it may result in a decrease in brightness or a malfunction. Clean and remove dust from the ventilation holes.
- The amount of dust and dirt that adheres depends on the installation location and usage time.

Disposal

When disposing the product, ask your local authority or dealer about the correct methods of disposal.

Do not disassemble the product before disposal.

Accessories

Accessories Supply

Check that you have the accessories and items shown.

Power supply cord

TH-86EQ3W

(Approx. 2 m)
• 1JP155AF1U



2JP155AF1W



3JP155AF1W



TH-75EQ3W, TH-65EQ3W, TH-55EQ3W, TH-50EQ3W, TH-43EQ3W

(Approx. 2 m)

1JP143CQ2U



2JP143EQ2W



3JP143EQ2W



Remote Control Transmitter

× 1

DPVF25997C/X1



Batteries for the Remote Control Transmitter × 2

(AAA/R03/LR03 type)



Clamper (large) × 2

DPVF1654ZA



Attention

- Store small parts in an appropriate manner, and keep them away from young children.
- The part numbers of accessories are subject to change without notice. (The actual part number may differ from the ones shown above.)
- In case you lost accessories, please purchase them from your dealer. (Available from the customer service)
- Dispose the packaging materials appropriately after taking out the items.

Remote Control Batteries



Open the battery cover.



AAA/R03/LR03 type

Insert batteries and close the battery cover.

(Insert starting from the side.)

Note

- Incorrect installation of the batteries can cause battery leakage and corrosion that will damage the remote control.
- Disposal of batteries should be done in an environment-friendly manner.

Take the following precautions.

- 1. Batteries shall always be replaced as a pair.
- 2. Do not combine a used battery with a new one.
- 3. Do not mix battery types (example; manganese dioxide battery and alkaline battery etc.).
- 4. Do not attempt to charge, disassemble or burn used batteries.
- 5. Do not burn or breakup batteries.

Moreover, batteries must not be exposed to excessive heat such as sunshine, fire or the like.


Cautions when

moving

65-inch model

86-inch model 75-inch model

The Display has handles for carrying. Hold them when moving.

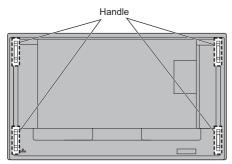

Note

- Do not hold parts other than the handles.
- The following number of people are required to carry

86-inch model 75-inch model : 4 or more 65-inch model 55-inch model 50-inch model 43-inch model]: 2 or more

If this is not observed, the unit may drop, resulting in


- When carrying the unit, keep the liquid crystal panel upright.
 - Carrying the unit with the surface of the liquid crystal panel facing up or down may cause deformation of the panel, or internal damage.
- Do not hold the upper, lower, right and left frames or the corners of the unit. Do not hold the front surface of the liquid crystal panel. Also, do not hit such parts.

Doing so may damage the liquid crystal panel. Also, the panel may crack, resulting in injury.


Kensington security

The security slot of this unit is compatible with the Kensington security slot.

86-inch model 75-inch model 65-inch model

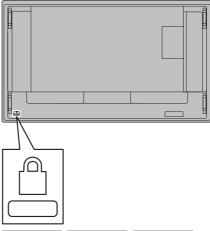




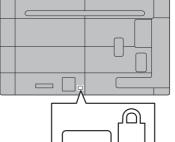


Eyebolt 86-inch model 75-inch model

The Display has holes for attaching eyebolts (M10). When installing, use them to suspend the Display Use the eyebolt only for temporary suspension or movement for installation. This cannot be used for permanent hanging installation.

Eyebolt (commercially available) mounting positions

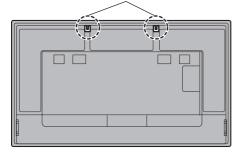


Attach the eyebolt on the eyebolt mounting position (two locations).

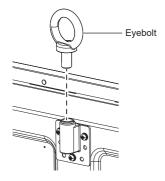

Note

- Installation should be performed by an installation professional.
- . Do not suspend using only 1 eyebolt.
- Use commercially sold M10 eyebolts with a shank length of 12 mm to 40 mm that satisfies the load condition of product quality.
- Use ISO 3266 standard eyebolts. Also use ISO standard members (wire, etc.) for hanging.
- The hanging angle should be 60° or more.

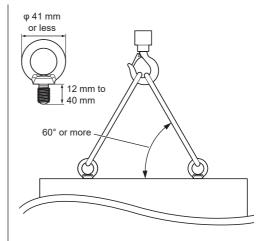



Connections

AC cord connection and fixing / Cable fixing

86-inch model

Back of the unit

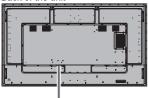

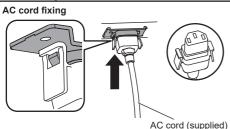


Plug the connector into the display unit.

Plug the connector until it clicks.

Note

Make sure that the connector is locked on both the left and right sides.

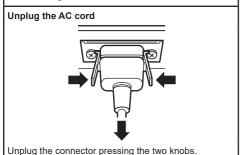


Note


- Do not use an AC cord of which the knobs are damaged. If it is used with the knobs damaged, a bad connection may result between the AC cord connector and the AC IN terminal. For the repair of the AC cord, consult the dealer where you purchased the product.
- When disconnecting the AC cord, be absolutely sure to disconnect the AC cord plug at the socket outlet
- The supplied AC cord is for this unit exclusive use. Do not use this for other purposes.

75-inch model 65-inch model 55-inch model 50-inch model 43-inch model

Back of the unit

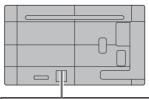

Insert the AC cord securely all the way seated on

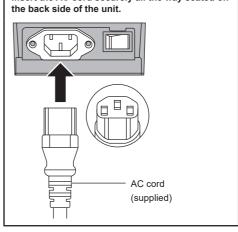

Note


- When disconnecting the AC cord, be absolutely sure to disconnect the AC cord plug at the socket outlet
- The supplied AC cord is for this unit exclusive use. Do not use this for other purposes.

Cable fixing

Note

 2 clampers are supplied with this unit. Fix the cables at location as shown below.

If you need more clampers, purchase them from your dealer. (Available from the customer service)

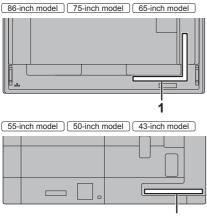


1 For signal cable: clamper

1. Attach the clamper


Note

- Wipe off dirt, such as dust, water and oil on the attachment surface, and affix the clamper on the attachment surface by pushing it firmly.
- Once the clamper is affixed, it cannot be reused. Be sure to confirm the attaching position before affixing it

Remove the tape at the back, and affix the clamper on the flat surface.

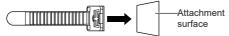


2. Bundle the cables

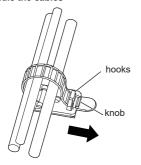

To loosen:

Remove the band from the knob, and pull out the band tip.

Video equipment connection

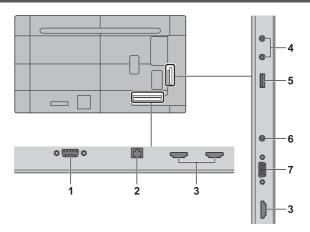

1 SERIAL IN: SERIAL Input Terminal

Control the Display by connecting

to PC.

2 LAN: LAN Terminal

Control the Display by connecting to Network.

3 HDMI IN 1, HDMI IN 2, HDMI IN 3: **HDMI Input Terminal**

Connect to video equipment such as VCR or DVD player, etc.

 Use a commercially available HDMI cable (conforming to the HDMI standard) that supports 4K.

AUDIO OUT: Analogue Audio Output
Terminal

Connect to audio equipment with analogue audio input terminal.

5 USB: USB Terminal

Connect the USB memory to use "USB media file playback function". Also, this can be used to supply power of up to 5 V / 2 A to an external device when the picture is displayed.

6 AUDIO IN: Audio Input Terminal


7 PC IN: PC Input Terminal
Connect to video terminal of PC.

Before connecting

- Before connecting cables, carefully read the operating instructions for the external device to be connected.
- Turn off the power of all devices before connecting cables.
- Take note of the following points before connecting the cables. Failure to do so may result in malfunctions.
 - When connecting a cable to the unit or a device connected to the unit itself, touch any nearby metallic objects to eliminate static electricity from your body before performing work.
 - Do not use unnecessarily long cables to connect a device to the unit or to the unit body. The longer the cable, the more susceptible to noise it becomes. Since using a cable while it is wound makes it act like an antenna, it is more susceptible to noise
 - When connecting cables, insert them straight into the connecting terminal of the connecting device so that the ground is connected first.
- Acquire any cable necessary to connect the external device to the system that is neither supplied with the device nor available as an option.
- If the outer shape of the plug of a connection cable is large, it may come in contact with the periphery such as a back cover or the plug of an adjacent connection cable. Use a connection cable with the suitable plug size for the terminal alignment.
- When connecting the LAN cable with plug cover, be aware that the cover may come in contact with the back cover and it may be difficult to disconnect.
- Some PC models are not compatible with the unit.
- Use cable compensator when you connect devices to the unit using long cables. Otherwise the image may not be displayed properly.

Identifying Controls

Display

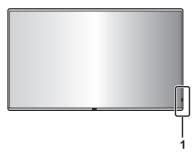

1 Power Indicator / Remote control sensor

The Power Indicator will light.


When the power of the unit is ON (Power button (७/|) (Unit): ON)

- Picture is displayed: Blue
- When the unit enters the standby mode: Orange or purple

When the unit enters the standby state with the following functions: Purple

- Standby state when [Power save mode] is set to [Disable]
- Standby state when the [Power Management] function is activated
- Standby state when the [Setup Timer] function is being used
- · Standby state when [Quick start] is set to [On]

Standby states in conditions other than the above: Orange

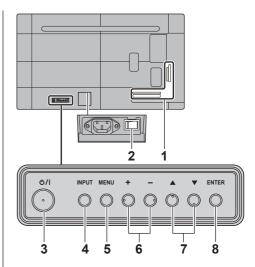

1 External input / output terminal

Connects to video equipment, PC, etc. (see page 17)

2 Main power switch (○/|) (Unit)

Turns OFF (O) or ON () the main power.

Turning ON and OFF the <Main power switch> is the same as plugging and unplugging the power plug.

Turn ON () the main power first, and then turn OFF or ON the power using the Power button of the remote control or the unit.

3 Power button (⊕/|) (Unit)

When the <Main power switch> of the Display is turned ON (|), use this button to turn the power on or let the unit enter the standby state.

4 INPUT (Unit)

Selects the connected device.

5 MENU (Unit)

Displays the menu screen.

6 + (Unit) / - (Unit)

Adjusts the volume.

On the main screen, switches settings or adjusts settings level.

7 ▲ (Unit) / ▼ (Unit)

Selects the setting item on menu screen.


8 ENTER (Unit)

Configures the item on menu screen.

Note

 To output sound from the built-in speakers of the unit, be sure to set [Speaker] in the [Sound] menu.

Remote Control Transmitter

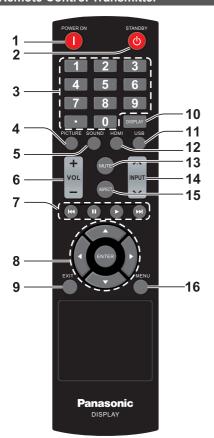

1 POWER ON button (|)

 Turns the power on (Picture is displayed) when the Display is turned off (Standby condition).

2 STANDBY button (也)

 Turns the power off (Standby condition) when the Display is turned on.

3 Numeric buttons (0 - 9) / ·

Input numbers in LAN settings.

4 PICTURE

Adjust Picture mode.

5 SOUND

Displays a screen for changing the sound quality of the Display

Each time <SOUND> is pressed, the setting changes as follows.

Treble → Bass

6 VOL + / VOL -

Adjusts sound volume level.

7 Navigation keys (II, ▶, ►I)

Used in the USB menu and HDMI CEC function.

8 ENTER / Cursor buttons (▲ ▼ ◀▶)

• Used to operate the menu screens.

9 EXIT

Turns off the menu screens.

10 DISPLAY

Displays information about the Display.

11 USB

Switches to USB input.

12 HDMI

Switches to HDMI input.

13 MUTE

Sound mute on / off.

14 INPUT A / V

Switches input to display on the screen.

15 ASPECT

Change aspect ratio.

16 MENU

• Press to open the OSD menu.


Note

 In this manual, buttons of the remote control and the unit are indicated as < >.

The operation is mainly explained indicating the remote control buttons but you can also operate with the buttons on the unit when there are the same buttons.

Basic Controls

Power button (\circlearrowleft /I) (Unit) (Back of the unit)

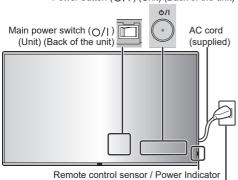

AC socket outlet

Operate pointing the remote control directly at the unit's Remote Control Sensor.



Note

- Do not put an obstacle between the remote control sensor of the main unit and the remote control.
- Operate the remote control in front of the remote control sensor or from the area where the sensor can be seen
- When directly aiming the remote control at the remote control sensor of the main unit, the distance from the front of remote control sensor should be approx.
 7 m or less. Depending on the angle, the operation distance may be shorter.
- Do not subject the remote control sensor of the main unit to the direct sunlight or strong fluorescent light.

1 Connect the AC cord plug to the Display.

(see page 15)

2 Connect the plug to the socket outlet.

Note

- When disconnecting the AC cord, be absolutely sure to disconnect the AC cord plug at the socket outlet first.
- The settings may not be saved if the power plug is disconnected immediately after changing settings with on-screen menu. Disconnect the power plug after a enough period of time. Or, disconnect the power plug after turning the power off with the remote control, RS-232C control or LAN control.
- 3 Turn ON (|) the <Main power switch (○/|)> on the unit.
- 4 Press the <Power button (⊕/|)> on the unit to turn the power of the unit ON.
 - Power Indicator: Blue (Picture is displayed.)
 - When the <Main power switch> is ON (|), the power indicator lights up and remote control operation is possible.
 - When the power indicator is lit, it is not necessary to press the <Power button (⊕/I) (Unit)> on the unit. Operate the remote control so that the power indicator turns Blue (picture is displayed).

■ To turn the power ON/OFF with the remote control

To turn the power on

- When the <Main power switch> is ON (|) (Power Indicator - orange or purple), press <POWER ON button (|)> then the picture will be displayed.
- Power Indicator: Blue (Picture is displayed.)

To turn the power off (Standby condition)

- When the <Main power switch> is ON (|) (Power Indicator blue), press <STANDBY button (也)>, then the power will be turned off.
- Power Indicator: Orange or purple (standby)

Note

 After the power plug is disconnected, the power indicator may remain lit for a while. This is not a malfunction. ■ When the Unit is turned on for the first time Following screen will be displayed.

When setting [Quick start], select [On] with ◀▶ and press <ENTER>.



Note

- Placing the cursor on [On] on the [Quick start] setting screen displays the following message.
 "Power consumption is increased in standby mode."
- Once the items are set, the screens won' be displayed when switching on the unit next time.
 Each item can be reset in the following menus.
 [Quick start]
- The OSD language can be selected with ▲ ▼.

Specifications

Model No.

86-inch model : TH-86EQ3W

75-inch model : TH-75EQ3W

65-inch model : TH-65EQ3W

55-inch model : TH-55EQ3W

50-inch model]: TH-50EQ3W

43-inch model : TH-43EQ3W

Power Supply

86-inch model

 $110 - 240 \text{ V} \sim (110 - 240 \text{ V} \text{ alternating current}), 50/60 \text{ Hz}. 4.5 - 2.2 \text{ A}$

75-inch model

 $110 - 240 \text{ V} \sim (110 - 240 \text{ V} \text{ alternating current}), 50/60 \text{ Hz}, 2.9 - 1.4 \text{ A}$

65-inch model

 $110 - 240 \text{ V} \sim (110 - 240 \text{ V} \text{ alternating current}), 50/60 \text{ Hz}. 2.5 - 1.3 \text{ A}$

55-inch model

 $110 - 240 \text{ V} \sim (110 - 240 \text{ V} \text{ alternating current}), 50/60 \text{ Hz}. 1.9 - 1.0 \text{ A}$

50-inch model

 $110 - 240 \text{ V} \sim (110 - 240 \text{ V} \text{ alternating current}), 50/60 \text{ Hz}, 1.6 - 0.8 \text{ A}$

43-inch model

 $110 - 240 \text{ V} \sim (110 - 240 \text{ V} \text{ alternating current}), 50/60 \text{ Hz}, 1.3 - 0.7 \text{ A}$

Power Consumption*1

86-inch model

336 W

75-inch model

217 W

65-inch model

184 W

55-inch model

142 W

50-inch model

119 W

43-inch model

93 W

Stand-by condition

0.5 W

LCD Display panel

86-inch model

86-inch ADS panel (Direct LED backlight), 16:9 aspect ratio

75-inch model

75-inch ADS panel (Direct LED backlight), 16:9 aspect ratio

65-inch model

65-inch ADS panel (Direct LED backlight), 16:9 aspect ratio

55-inch model

55-inch ADS panel (Direct LED backlight), 16:9 aspect ratio

50-inch model

50-inch VA panel (Direct LED backlight), 16:9 aspect ratio

43-inch model

43-inch ADS panel (Direct LED backlight), 16:9 aspect ratio

Screen size

86-inch model

1 895.0 mm (W) \times 1 065.9 mm (H) \times 2 174.2 mm (diagonal) / 74.60" (W) \times 41.96" (H) \times 85.60" (diagonal)

75-inch model

1 649.6 mm (W) × 927.9 mm (H) × 1 892.7 mm (diagonal) / 64.94" (W) × 36.53" (H) × 74.51" (diagonal)

65-inch model

1 428.4 mm (W) × 803.5 mm (H) × 1 638.9 mm (diagonal) / 56.23" (W) × 31.63" (H) × 64.52" (diagonal)

55-inch model

1 209.6 mm (W) × 680.4 mm (H) × 1 387.8 mm (diagonal) / 47.62" (W) × 26.78" (H) × 54.63" (diagonal)

50-inch model

1 095.8 mm (W) \times 616.4 mm (H) \times 1 257.3 mm (diagonal) / 43.14" (W) \times 24.26" (H) \times 49.50" (diagonal)

43-inch model

941.1 mm (W) × 529.4 mm (H) × 1 079.8 mm (diagonal) / 37.05" (W) × 20.84" (H) × 42.51" (diagonal)

No. of pixels

8 294 400

(3 840 (Horizontal) × 2 160 (Vertical))

Dimensions (W × H × D)

86-inch model

1 929 mm × 1 100 mm × 96 mm (excluding handles: 70 mm) / 75.95" × 43.31" × 3.76" (excluding handles: 2.74")

75-inch model

1 684 mm × 962 mm × 96 mm (excluding handles: 70 mm) / 66.28" × 37.87" × 3.76" (excluding handles: 2.74")

65-inch model

1 463 mm × 838 mm × 94 mm (excluding handles: 69 mm) / 57.58" × 32.97" × 3.68" (excluding handles: 2.72")

55-inch model

1 242 mm × 713 mm × 66 mm / 48.89" × 28.06" × 2.60"

50-inch model

1 129 mm × 649 mm × 66 mm / 44.43" × 25.56" × 2.60"

43-inch model

973 mm × 562 mm × 65 mm / 38.31" × 22.10" × 2.56"

Mass

86-inch model

Approx. 46.0 kg / 101.5 lbs net

75-inch model

Approx. 35.6 kg / 78.5 lbs net

65-inch model

Approx. 27.1 kg / 59.8 lbs net

55-inch model

Approx. 15.6 kg / 34.4 lbs net

50-inch model

Approx. 13.5 kg / 29.8 lbs net

43-inch model

Approx. 10.7 kg / 23.6 lbs net

Operating condition

Temperature

0 °C - 40 °C (32 °F - 104 °F)*2

Humidity

20 % - 80 % (no condensation)

Operating Time

18 hours/day

Connection terminals

HDMI IN 1

HDMI IN 2

HDMI IN 3

TYPE A Connector*3 × 3

Audio signal:

Linear PCM (sampling frequencies: 48 kHz, 44.1 kHz, 32 kHz)

AUDIO IN

Stereo mini jack (M3) × 1, 0.5 Vrms

PC IN

Mini D-sub 15 Pin (Compatible with DDC2B) × 1

AUDIO OUT

RCA jack, 0.5 Vrms

Output: Variable (-∞ - 0 dB)

(1 kHz 0 dB input, 10 k Ω load)

SERIAL IN

External Control Terminal

D-sub 9 Pin × 1:

RS-232C compatible

LAN

Communication method:

RJ45, 10BASE-T / 100BASE-TX

USB

USB connector × 1, TYPE A

DC 5V / 2.0 A

Sound

Speakers

φ 30 mm × 2 × 2 pieces

Audio Output

20 W [10 W + 10 W] (10 % THD)

Remote Control Transmitter

Power source

DC 3 V (battery (AAA/R03/LR03 type) × 2)

Operating range

Approx. 7 m (22.9 ft)

(when operated directly in front of remote control sensor)

Mass

Approx. 91 g / 3.21 oz (including batteries)

Dimensions (W × H × D)

48 mm × 27 mm × 190 mm / 1.89" × 1.06" × 7.48"

- *1: Shipping condition
- *2: Environmental temperature to use this unit at high altitudes (1 400 m (4 593 ft) and higher and below 2 800 m (9 186 ft) above sea level): 0 °C to 35 °C (32 °F to 95 °F)
- *3: VIERA LINK is not supported.

Note

 Design and specifications are subject to change without notice. Mass and dimensions shown are approximate.

Software License

This product incorporates the following software:

- (1) the software developed independently by or for Panasonic Projector & Display Corporation,
- (2) the software owned by third party and licensed to Panasonic Projector & Display Corporation,
- (3) the software licensed under the GNU General Public License, Version 2.0 (GPL V2.0),
- (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL V2.1), and/or
- (5) open source software other than the software licensed under the GPL V2.0 and/or LGPL V2.1.

The software categorized as (3) - (5) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

At least three (3) years from delivery of this product, Panasonic Projector & Display Corporation will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL V2.0, LGPL V2.1 or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.

Contact Information:

oss-cd-request@gg.jp.panasonic.com

Notice about AVC/VC-1/MPEG-4

This product is licensed under the AVC Patent Portfolio License, VC-1 Patent Portfolio License and MPEG-4 Visual Patent Portfolio License for the personal use of a consumer or other uses in which it does not receive remuneration to (i) encode video in compliance with the AVC Standard, VC-1 Standard and MPEG-4 Visual Standard ("AVC/VC-1/MPEG-4 Video") and/or (ii) decode AVC/VC-1/MPEG-4 Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide AVC/VC-1/MPEG-4 Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See http://www.mpegla.com.

PANASONIC PROFESSIONAL DISPLAY Limited Warranty Coverage

Panasonic Projector & Display Americas (referred to as "Panasonic") will repair or replace the Professional Display product (the "Product") and its accessories with new or refurbished parts/Product, free of charge in the continental USA, during the applicable warranty coverage period from the original date of purchase in the event of a defect in materials or workmanship.

Models or Parts	Part Warranty	Labor Warranty		
All Professional Display Model	3 Years	3 Years		
Exceptions				
All Panasonic accessories: e.g. mounting kit, input signal module, cables, remote control.	1 Year	1 Year		

Service Options

- Product exchange, carry-in, or mail-in service within the continental USA can be obtained during the warranty period by contacting Panasonic's Technical Support Center at 855-772-8324 or via email at ProDisplaySupport@us.panasonic.com.
- For in-warranty service at our service center, Panasonic will provide inbound and outbound shipping for
 products requiring repair or exchange. In the case of mail-in service, the customer is responsible for
 securely packaging the product in a suitable packaging.
- For out-of-warranty Product units submitted for repairs or for in-warranty units submitted by customers
 outside of the continental USA, shipping arrangements and costs (both ways) are the customer's
 responsibility.
- Panasonic shall not be liable for any expenses incurred in identifying the source of system issues no related
 to our products, nor for the costs related to the removal and installation of the defective product or
 replacement product.

Warranty Conditions Eligibility

- This warranty is extended only to the original purchaser and is nontransferable.
- A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered.
- Whenever the date of original purchase cannot be satisfactorily determined, the date of manufacture based on the serial number of the unit will be deemed to be the effective date of the warranty.
- Panasonic reserves the right to audit and reject any warranty claim that cannot be substantiated.
- This warranty only covers failures due to defects in materials or workmanship which occur during normal use
 of the Product.

Panasonic Projector & Display Americas

Two Riverfront Plaza, Newark, NJ 07102

Exclusions

- Damage to the display and its components which occur in shipping.
- Failures caused by products not supplied by Panasonic.
- Failures resulting from accident, misuse, abuse, neglect, mishandling, misapplication, alteration,
 modification, faulty installation, setup adjustments, improper antenna, inadequate signal pickup,
 maladjustment of user controls, improper operation, power line surge, improper voltage supply, lightning
 damage, smoke or chemical vapors contamination, air conditioning, humidity control or other environmental
 conditions during operation or storage period.
- Failure to maintain the product in accordance with the applicable Operating Instructions.
- Service by anyone other than an authorized Panasonic repair facility.
- Damage attributable to acts of violence, war, acts of God or force majeure.
- Damage caused by excessive continual usage beyond the operational time described in the Operating Instructions.
- Units with defaced, modified, tampered with, or removed model and serial number labels.
- Consumable parts.

Limitations

PANASONIC SHALL NOT BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR SPECIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF DATA, LOSS OF PROFIT, LOSS OF REVENUE, OR LOSS OF BUSINESS OR GOODWILL, SUFFERED BY ANY PERSON, AND RESULTING FROM THE USE OF THIS PANASONIC PROFESSIONAL DISPLAY PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS WARRANTIES SPECIFIED ABOVE ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

If you have a problem with this product that is not handled to your satisfaction, then write to the Consumer Affairs Department at the Panasonic's address indicated above.

Contact your Panasonic representative for services beyond this limited warranty.

PANASONIC PROFESSIONAL DISPLAY Limited Warranty Coverage

Panasonic Projector & Display Americas (referred to as "Panasonic") will repair or replace the Professional Display product (the "Product") and its accessories with new or refurbished parts/Product, free of charge in Canada, during the applicable warranty coverage period from the original date of purchase in the event of a defect in materials or workmanship.

Models or Parts	Parts Warranty	Labor Warranty		
All Professional Display Models	3 Years	3 Years		
Exceptions				
All Panasonic				
accessories: e.g.				
mounting kits, input	1 Year	1 Year		
signal modules, cables,				
remote controls.				

Service Delivery Options

- Product exchange, carry-in, or shipped in service within Canada can be obtained during the warranty
 period by contacting Panasonic's Technical Support Center at 1-855-639-9717 or via email at
 p-d service@ca.panasonic.com.
- For in-warranty service at our service center, Panasonic will provide inbound and outbound shipping for
 products requiring repair or exchange. In the case of shipped in service, the customer is responsible for
 securely packaging the product in a suitable box.
- For out-of-warranty units submitted for repair or for in-warranty units submitted by customers outside of Canada, shipping arrangements and costs (both ways) are the customer's responsibility.

Warranty Conditions

- This warranty is extended only to the original purchaser and is nontransferable.
- A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered.
- Whenever the date of original purchase cannot be satisfactorily determined, the date of manufacture based on the serial number of the unit will be deemed to be the effective date of the warranty.
- Panasonic reserves the right to audit and reject any warranty claim that cannot be substantiated.
- This warranty only covers failures due to defects in materials or workmanship which occur during normal use of the Product

Panasonic Projector & Display Americas

Two Riverfront Plaza, Newark, NJ 07102

Exclusions

- Damage to the display and its components which occur in shipping.
- Failures caused by products not supplied by Panasonic.
- Failures resulting from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, setup adjustments, improper antenna, inadequate signal pickup, maladjustment of user controls, improper operation, power line surge, improper voltage supply, lightning damage, smoke or chemical vapor contamination, air conditioning, humidity control or other environmental conditions during operation or storage period.
- Failure to maintain the product in accordance with the applicable Operating Instructions.
- Service by anyone other than an authorized repair facility.
- Damage attributable to acts of violence, war, acts of God or force majeure.
- Damage caused by excessive continual usage beyond the operational time described in the Operating Instructions.
- · Units with defaced, modified, tampered with, or removed model and serial number labels.
- Consumable parts.

Limitations

PANASONIC SHALL NOT BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR SPECIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF DATA, LOSS OF PROFIT, LOSS OF REVENUE, OR LOSS OF BUSINESS OR GOODWILL, SUFFERED BY ANY PERSON, AND RESULTING FROM THE USE OF THIS PANASONIC PROFESSIONAL DISPLAY PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS WARRANTIES SPECIFIED ABOVE ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Some Provinces do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

If you have a problem with this product that is not handled to your satisfaction, then write to the Consumer Affairs Department at the Panasonic's address indicated above.

Contact your Panasonic representative for services beyond this limited warranty.

Disposal of Old Equipment and Batteries

Only for European Union and countries with recycling systems



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation. By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment. For more information about collection and recycling, please contact your local authority.



Note for the battery symbol (bottom symbol)

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Notice (U.S.A.only)

To dispose of your product, please recycle in accordance with local environmental regulations. For further recycling please visit

https://shop.panasonic.com/recycle

Customer's Record

The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number

Serial Number

Panasonic Projector & Display Americas LLC

Two Riverfront Plaza, Newark, New Jersey 07102

TEL: +1-201-348-7000

Manufactured by:

Panasonic Projector & Display Corporation

2-15 Matsuba-cho, Kadoma City, Osaka 571-8503, Japan

Importer:

Panasonic Connect Europe GmbH

Hagenauer Strasse 43, 65203 Wiesbaden, Germany

Authorized Representative in EU:

Panasonic Connect Europe GmbH

Panasonic Testing Centre

Winsbergring 15, 22525 Hamburg, Germany

Importer for UK:

Panasonic Connect UK,

a branch of Panasonic Connect Europe GmbH,

Maxis 2. Western Road, Bracknell, Berkshire, RG12 1RT

Panasonic Projector & Display Corporation

English

2-15 Matsuba-cho, Kadoma City, Osaka 571-8503, Japan Web Site: https://docs.connect.panasonic.com/prodisplays