

Information

Fixed-Focus Lens

Model No. **ET-D75LE50**

Thank you for purchasing this Panasonic product.

- Carefully read through these Information and the operating instructions of the projector to ensure safe and proper operation.


Screen Periphery Focus Adjustment Function

The short focus lens changes the focal balance between the center and periphery of the screen, depending on the size of the screen it is projecting on.


The ET-D75LE50 is equipped with a focus adjustment function for the screen periphery.

Adjusting the Focus


- (1) Focus the center of the screen by operating the projector unit.
- (2) Loosen the lock knob by turning it counterclockwise.



- (3) Turn the periphery focus adjustment ring in the direction shown by the arrow, and bring the screen periphery into focus.

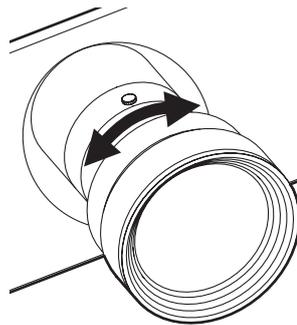

- (4) Tighten the lock knob by turning it clockwise.

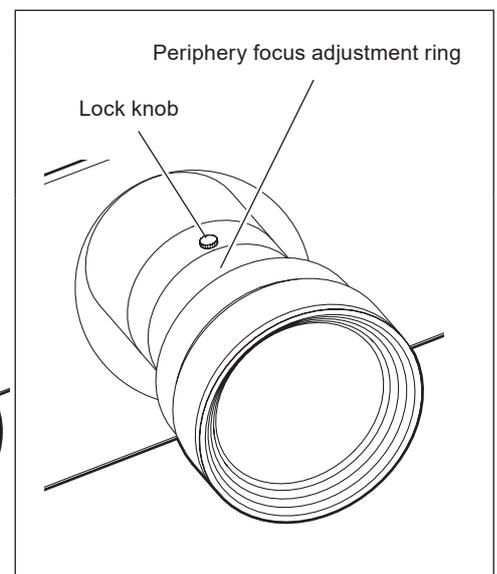

Note

- The screen sizes (70 ⇔ 1000) shown on the lens are an approximate guide.

Attention

- When the ET-D75LE50 lens is to be mounted onto a projector equipped with a projection lens cover, either mount it onto the projector with the projection lens cover already attached to the projection lens or mount it onto the projector after first removing the lens cover.
- For details on the projection distance, see the projector specifications (<https://www.pavc.panasonic.co.jp/projector/extranet/main/spec/index.html>).

Panasonic Corporation

Web Site : <https://panasonic.net/cns/projector/>

© Panasonic Corporation 2012

TQDH19073-1
Printed in Japan

お知らせ

固定焦点レンズ

品番 ET-D75LE50

このたびは、パナソニック製品をお買い上げいただき、まことにありがとうございます。

■ この「お知らせ」とプロジェクターの「取扱説明書」をよくお読みのうえ、正しく安全にお使いください。

画面周辺フォーカス調整機能について

短焦点レンズは、プロジェクターが投写するスクリーンサイズによって画面の中央と周辺のフォーカスバランスが変化します。

本機 ET-D75LE50 には周辺のフォーカス調整機能があります。


フォーカス調整のしかた

(1) プロジェクター本体側の操作で、投写画面中央のフォーカスを合わせる

(2) ロックつまみを反時計方向に回して緩める

(3) 周辺フォーカス調整リングを矢印の方向に回して、画面周辺のフォーカスを合わせる

(4) ロックつまみを時計方向に回して締める

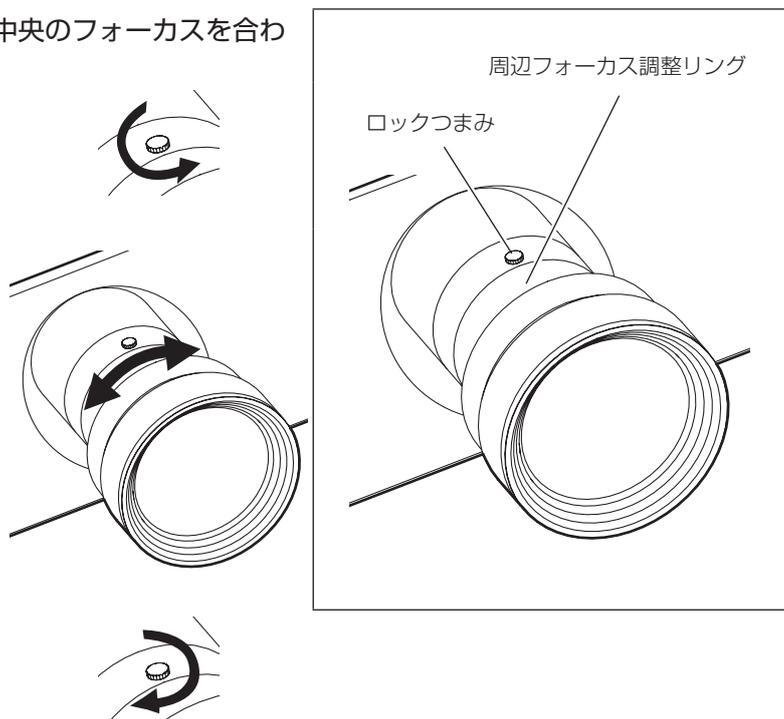

お知らせ

- レンズに表示しているスクリーンサイズ (70 ⇄ 1000) は、おおよその目安です。

お願い

- 本機 ET-D75LE50 を投写レンズカバーの付いたプロジェクターに取り付ける場合は、投写レンズカバーをあらかじめ投写レンズに取り付けた状態でプロジェクター本体に取り付けるか、またはレンズカバーを取り外したうえでプロジェクター本体に取り付けるようにしてください。
- 投写距離については、装着するプロジェクターの仕様書 (<https://panasonic.biz/cns/projector/download/spec/>) をご覧ください。

パナソニック株式会社 コネクティッドソリューションズ社

〒571-8503 大阪府門真市松葉町2番15号 電話 ☎ 0120-872-601